

Replacing the 9465-90 TIP PIN


The model 9465-90 pin is a replacement part for the model 9465-10 PIN TYPE LEAD. Perform the following steps to replace the pin.



1. Turn off power of the device, and disconnect the pin type lead.


2. Unscrew the cable lock to unlock the cable.

(The cable is locked by screwing the cable lock.)




3. Hold the pin base so that the cable won't rotate, and then rotate the grip to loosen it.

Beware of injury.
The tip has a sharp point.



4. Pull off the connector and remove the pin.



Model 9465-90

Connector




Do not apply a load to the cable to prevent broken wires.

5. Replace the 9465-90 by inserting a new pin into the socket and pressing against a hard board or other surface to fix the pin firmly in place.



Model 9465-90

6. Assemble the pin type lead in the reverse order of disassembling. Do not pull or twist the cable.



To prevent broken wires, fasten the bush approx. 1mm higher than the catch. Be careful not to push the bush too deeply.

7. To avoid broken wires and contact failures, after tightening the cable lock, gently tug and twist the cable to check it is firmly held.

8. Check the performance. Measure an object with a known resistance. Make sure that the measured resistance is correct before using the pin type lead.

Specifications

Operating temperature and humidity	0°C to 40°C (32°F to 104°F), 80%RH or less (no condensation)
Storage temperature and humidity	-10°C to 50°C (14°C to 122°C), 80%RH or less (no condensation)
Operating Environment	Altitude up to 2000 m (6562 feet), Indoors
Size&Weight	Approx. 34 mm (1.34")/ Approx. 1.3 g (0.05 oz.)
Accessories	Instruction manual

9465F980-02 11-01H


9465-90 先ピンの交換方法

9465-90 先ピンは 9465-10 ピン形リードの交換用部品です。
以下の手順に従って交換してください。



1. 接続機器の電源を OFF にして、9465-10 を取り外します。
2. ケーブルロックを回転させて緩め、ケーブルをフリーな状態にします。
(ケーブルは、ケーブルロックをねじ込むことにより固定されています)


9465-10 ピン形リード



断線防止のため、ケーブルを
・引っ張らない
・回転させない

3. ケーブルが回転しないように先ピンベースを固定し、グリップを回転させて緩めます。

①先ピンベースをしっかりとつ




先端はとがっている
のでけがに注意！

4. コネクタを引っ張って先ピンを外します。




9465-90 先ピン




断線防止のため、ケーブルに負荷をかけない

5. 先ピンを新しいものに交換し、先ピンが飛び出さないように先端を固い板などに当ててコネクタを押し込みます。

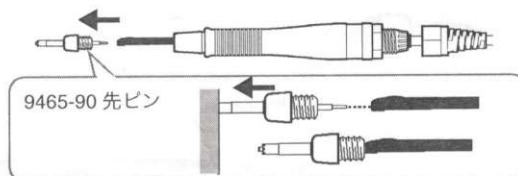

6. 分解したときの手順と逆に組み立てをします。組み立ての際も同様にケーブルを引っ張ったり、回転させたりしないでください。

ツメ部 プッシュ



・断線防止のため、ツメ部からプッシュが
1mm 程度出るようにする
・プッシュが奥に入り込まないように注意

7. 断線、接触不良を避けるため、ケーブルロックを締め付けた後、ケーブルを引っ張ったり、回転させてもケーブルがしっかり固定され、動かないことを確認してください。

8. 動作確認をします。既知の測定対象物を測定し、抵抗値が正確であるか確認してから使用してください。

仕様

使用温湿度範囲	0℃～40℃、80%rh 以下（結露なきこと）
保存温湿度範囲	-10℃～50℃、80%rh 以下（結露なきこと）
使用場所	屋内、高度 2000 m 以下
全長寸法	約 34 mm
質量	約 1.3 g
付属品	取扱説明書

9465F980-02 11-01H

